

Changing the O-Ring in the group head

Periodically the o-ring in the group head of your machine will wear out. This is characterised by the cialde (pod) becoming wet or the group head looking like it is leaking. This is normal and requires a simple replacement.

1. Ensure the machine is turned off and cool.
2. Raise the group head with the lever and hook out the old o-ring with a sturdy small instrument like the end of a paper clip.
3. Make sure the o-ring groove in the group head is clean.
4. With your finger, press the new o-ring in place, then clamp the group head down with the lever to fully secure the o-ring.
5. Enjoy your coffee.

