

## Instruction for changing the o-ring

### 1. Check the o-ring needs changing.

There are 2 ways to check, firstly there will be some leakage out of the side of the pod while extracting coffee and secondly when you run your finger over the o-ring when the machine is off and cool it will feel rough.

### 2. Make sure the machine is off and cool.

The raise the group head with the handle and hook out the old o-ring with a sturdy sharp point like a large safety pin.

### 3. Press the new o-ring in to the groove

- Press in the front then the back
  - Then press in the two sides
  - Finally then work your way around pressing in the rest of the o-ring in to the groove.
- Make sure it is engaged in the groove all the way around using a visual inspection to make sure, you may need a torch to see.

### 4. Close and lock the group head

to make sure the o-ring is correctly seated. Open the group head and make a visual inspection again. If all is in order, switch your machine back on and test again by making yourself a Lucaffé coffee.

